

Liebert® itON BX

Quick-Start Guide – 1000VA, 230V



IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation and maintenance of the UPS.

- Intended for installation in a controlled environment.
- Maximum ambient temperature 104°F (40°F).

CAUTION! To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area free of conductive contaminants. (See the specifications for the acceptable temperature and humidity range.)

CAUTION! To reduce the risk of overheating the UPS, do not cover the UPS' cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliances such as space heaters or furnaces.

CAUTION! Do not attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.

CAUTION! Do not plug the UPS input into its own output.

CAUTION! Do not allow liquids or any foreign object to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.

CAUTION! In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.

CAUTION! Do not attach a power strip or surge suppressor to the UPS.

CAUTION! If the UPS is with metal chassis, for safety purpose, grounding is a must during UPS installation in order to reduce leakage current below 3.5mA.

CAUTION! When replacing the batteries, use the same number and type of batteries.

CAUTION! Internal battery voltage is 12VDC. Sealed, lead-acid, 6-cell battery.

Attention hazardous through electric shock. Also with disconnection of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected in the plus and minus pole at the quick connectors of the battery when maintenance or service work inside the UPS is necessary.

CAUTION! Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.

CAUTION! Do not dispose of batteries in a fire. The battery may explode. Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes.

CAUTION! Unplug the UPS prior to cleaning and do not use liquid or spray detergent.

CAUTION! A battery can present a risk of electric shock and high short circuit current. The following precaution should be observed before replacing batteries:

- 1) Remove watches, rings, or other metal objects.
- 2) Use tools with insulated handles.
- 3) Wear rubber gloves and boots.
- 4) Do not lay tools or metal parts on top of batteries.
- 5) Disconnect charging source prior to connecting or disconnecting batteries terminal.

SETUP

Step 1 Inspect the Package

Inspect the package and the UPS upon receipt. Notify the carrier and dealer of visible damage.



UPS



Quick-start guide



2 x Output cables

Step 2 Decide Where to Place the UPS

The UPS must be placed indoors, protected from water, direct sunlight and excessive heat.


Provide at least 7.8" (20 cm) of clearance on all sides of the unit for proper ventilation.



Step 3 Charge the UPS Battery Before Use

The UPS battery is fully charged before shipping. However, some charge may be lost during shipping and the battery should be recharged prior to use.


- Plug in the AC input cord of personal computer or office equipment to the wall outlet. Use the supplied output cable to connect between UPS and personal computer or office equipment. For the best results, suggest to charge the battery at least 6 hours before initial use. The unit charges its battery while connecting to the utility.

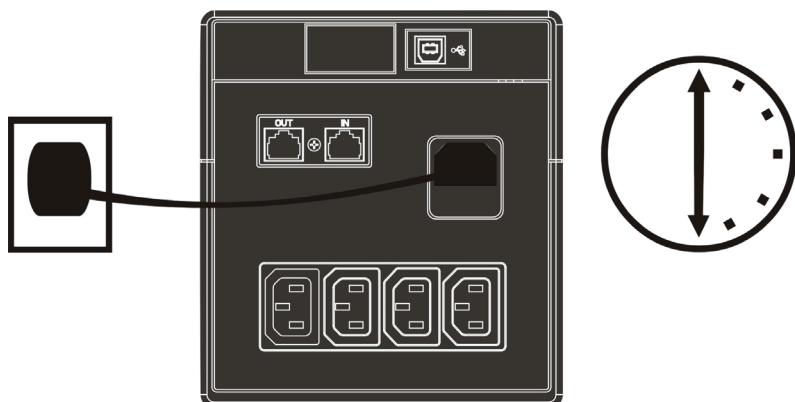

Step 4 Start the UPS

After the battery is fully charged:


- Turn on the UPS by pressing the On/Off button. (see below figure)
LED 1 should be illuminated (green), indicating the UPS is operating in Normal mode.

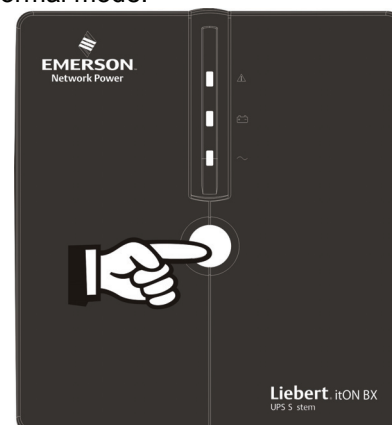

Step 5 Connect the Loads

The UPS has three battery backup outlets that provide power when the UPS operates on battery. (see Figure 2 on next page)

- Plug the loads into the battery backup outlets on the rear of the UPS.

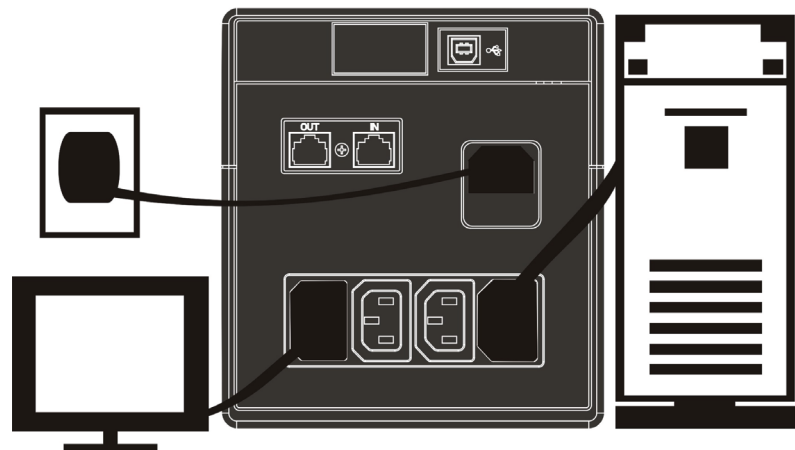

CAUTION: NEVER connect a laser printer or scanner to the UPS unit. This may cause the damage of the unit.

UPS CONTROLS AND CONNECTIONS

Figures 1 – Front Panel LEDs


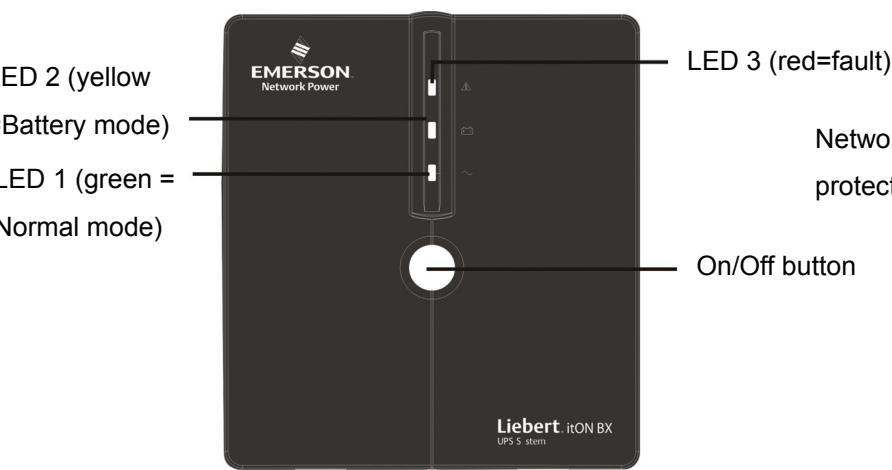


Figure 2 – Rear Panel

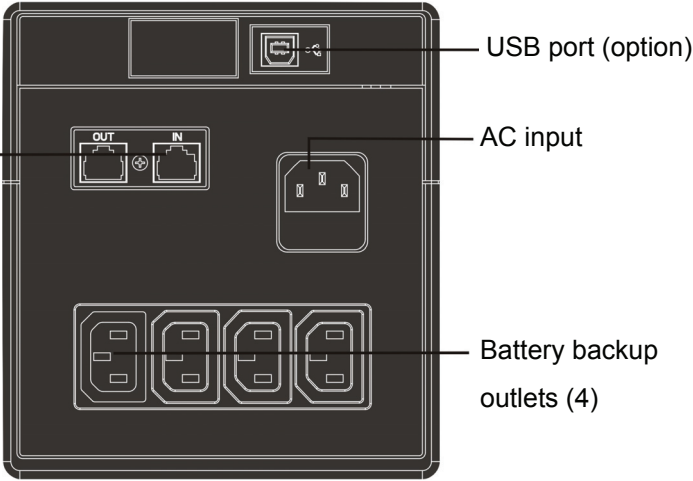

UPS Status, Alarm Conditions and Alerts

Condition	LED	Color	Solid/Flashing	Audible Alarm
Normal mode	LED 1	Green	Solid	(none)
Battery mode	LED 2	Yellow	Flashes	Every 10 seconds
Battery low	LED 2	Yellow	Flashes	Every 1 second
Overload at Normal mode	LED 1	Green	Solid	Every 0.5 second
Overload at Battery mode	LED 2	Yellow	Flashes	UPS shuts down immediately
Fault	LED 3	Red	Solid	Continuous until UPS shuts down

TROUBLESHOOTING

If the UPS malfunctions during operation, check the following chart for proper adjustment. For further assistance, please contact your local Emerson Network Power representative.

Problem	Possible Causes	Solutions
Utility is normal, but LED 1 is not illuminated.	Battery capacity may be low. The UPS battery reached end of life. The UPS may not be turned on.	- Recharge the UPS at least 6 hours. - Replace the battery with the same type of battery. - Press the On/Off button to turn on the UPS.
Alarm buzzer beeps continuously although utility power is normal.	The UPS may be overloaded.	Disconnect some equipment from the UPS.
UPS does not provide expected backup time.	The UPS may be overloaded Battery voltage may be low. The UPS battery reached end of life.	- Disconnect some equipment from the UPS. - Recharge the UPS at least 6 hours. - Replace the battery with the same type of battery.
Utility is normal, but LED 2 flashes.	The power cord may not be connected properly.	Connect the power cord securely into a wall outlet.

SPECIFICATIONS

Model Number	Liebert itON BX
Capacity (VA/W)	1000/600
Net Weight, lb. (kg)	17.63 (8.0)
Dimensions – W x D x H, in. (mm)	5.75 x 13.8 x 6.3 (146 x 350 x 160)
On-Line Input Voltage	162-290 VAC
On-Line Frequency	50Hz (auto sensing)
Output Voltage (Utility Power Normal)	230VAC
Output Voltage (Battery Operation)	+10% & –10%
On-Battery Wave Form	Stepped sinewave
Battery Type – VDC x Ah x Quantity	12V x 7 Ah x 2
Typical Recharge Time	4-6 hours to 90%
Battery Run Time* – Half Load	4 minutes
Operating Temperature, °F (°C)	32 to 104 (0 to 40)
Storage Temperature, °F (°C)	-4 to 122 (-20 to 50)
Operating /Storage Relative Humidity	0 – 90%, non-condensing

*Battery run time may vary depending on load.

For Technical Support, please contact:

Australia
T: 1-800-147704
New Zealand
T: 1-800-447415
Philippines & Pakistan
T: +632-9822911
Philippines-Domestic
T: 1-800-10-EMERSON
Malaysia
T: 1-800-882288
Singapore
T: 1-800-3637766
Indonesia
T: 1-800-882288

On the 1st voice prompt, press #2 for UPS product and then on the 2nd voice prompt they need to choose one of the options listed below:

- 1 – UPS technical support (UPS Inquiry)
- 2 – Monitoring Inquiry
- 3 – Warranty Concern