
ENGLISH

Quick start guide 3
IMPORTANT: 3
First use 3
Sports use 3
Frequently Asked Questions (FAQ) 3
Tech Specs 4
Audio 4
Connectivity 4
Hands-free microphone 4
Earphone Battery 4
Charging Case Battery 4
Others 4
Safety and maintenance 5
Prevention of hearing loss 5
Warranty 5

ENERGY SISTEM

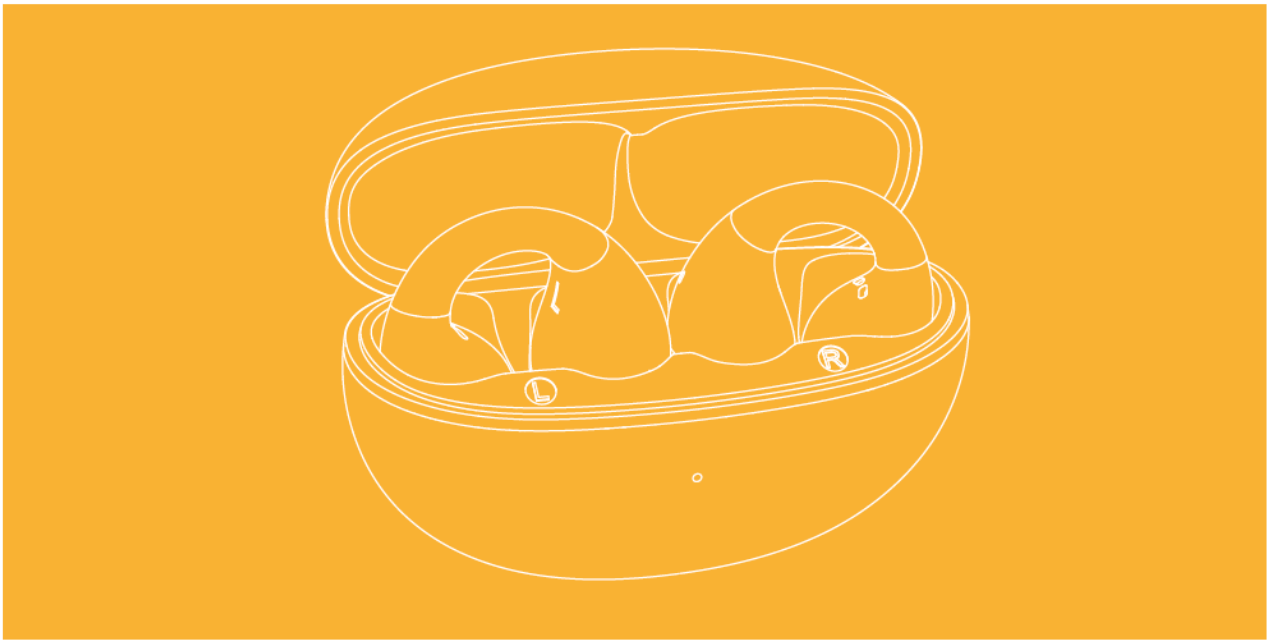

Thank you for trusting us and purchasing your new Energy earphones. We hope you enjoy it.

Quick start guide

Consult the quick guide by clicking here.

IMPORTANT:

First use

When using your earphones for the first time, remove the blue adhesive from the charging pins on each earbud. Place them back in the case to start charging.

Sports use

After exercising, we recommend drying the earphones thoroughly before placing them in their charging case. Keep the charging pins (metal points) clean and dry.

Frequently Asked Questions (FAQ)

- **How do I correctly position the earphones?**

The thicker part with the heart logo is placed on the back of the ear. This is where the touch control is located.

On the other hand, the part with a small grille is placed towards the front, inside the ear. It is this part that houses the sound transducer.

Place the back of the earphone downward, close to the earlobe. This will ensure the proper audio experience and ergonomics.



- **How do I reset the earphones?** Disconnect the headphones from any Bluetooth device, press 7 times quickly on the touch control of both headphones simultaneously and they will restart automatically. Put them in the charging case and when you take them out again you can connect them again via Bluetooth.

- **What is the Multipoint function and how does it work?**
  This feature allows you to connect the earphones simultaneously to two devices, such as a Smartphone and a laptop. **How do I connect the earphones to two devices?**

1) Connect your earphones to your Smartphone via Bluetooth®.
2) Disconnect the Bluetooth® from your Smartphone.
3) Pair the earphones with a second device.
4) Once the earphones are paired with the second device, turn on Bluetooth® on your Smartphone and connect them back to the first device.

- **What should I do if the earbuds don't charge when I place them in the case?**

1) Make sure the case is charged.
2) Make sure you've removed the protective caps from the earbuds' charging pins before using them for the first time.
3) If they still don’t charge, it’s most likely because the earbuds aren’t making good contact due to dirt on the charging pins. Clean the charging pins on both the case and the earbuds with a paper towel or cloth dampened with isopropyl alcohol. Let them dry completely, then try again.

Tech Specs

Audio

- Frequency response: 20 Hz ~ 20 kHz
- Driver diameter: 11 mm
- Maximum power: 30 mW
- Design: Open sound
- Type: dynamic

Connectivity

- Bluetooth version 5.4, class II
- Operating frequency: 2.4 GHz
- Maximum signal strength: < 20.00 dBm
- Supported Bluetooth profiles: HSP / HFP / A2DP / AVRCP
- Supported Bluetooth codecs: SBC / AAC
- Up to 20 metres range
- Hands-free function
- Google/Siri compatible voice assistant

Hands-free microphone

- Type: Built-in
- Sensitivity: -38 dB ± 3 dB
- Frequency range: 100 Hz ~ 10 kHz

Earphone Battery

- Capacity: 32 mAh / 3.7 V
- Type: Lithium polymer
- Battery life at medium volume: 5 hours
- Charging time: 1 hour

Charging Case Battery

- Capacity: 400 mAh / 3.7 V
- Type: Lithium polymer
- Extra autonomy: 20 hours
- Charging time: 2 hours
- Charging system: USB Type C

Others

- IPX4 waterproof certificated.

*Approximate information. Battery life depends on volume selected and type of music played.

Safety and maintenance

- Do not expose the device to shock, dust, moisture or high temperatures.
- Do not apply corrosive or abrasive cleaning agents to the device.
- Do not disassemble the device. Any repair must be carried out exclusively by qualified Energy Sistem Technology, S.A. personnel.
- Be sure to keep the device switched off when not in use and do not leave it for a long period of time with the battery completely discharged.
- Keep the device and its packaging out of the reach of children and pets to avoid possible accidents.
- Do not use the device while driving a vehicle.

Prevention of hearing loss

Listening to music at high volume levels for long periods of time can cause permanent hearing damage. To avoid hearing damage, we recommend turning down the volume of the player before starting music playback and then gradually increasing the volume to a comfortable, moderate listening level.

Warranty

You can check the warranty conditions here.